


Basic Guide to Your Remote Control & DVR Functions

DVR Functions

- || = Pause
- ▶ = Play
- = Stop
- ▶▶ = Fast Forward
- ◀◀ = Rewind
- DVR List = List DVR Recordings
- & ↺ = Not used
- Ⓜ = Record button

Mode button lets you change the remote to control TV, AUD, DVD, AUX, STB

TV, AUD, DVD, and Aux need to be programmed
STB is pre-programmed

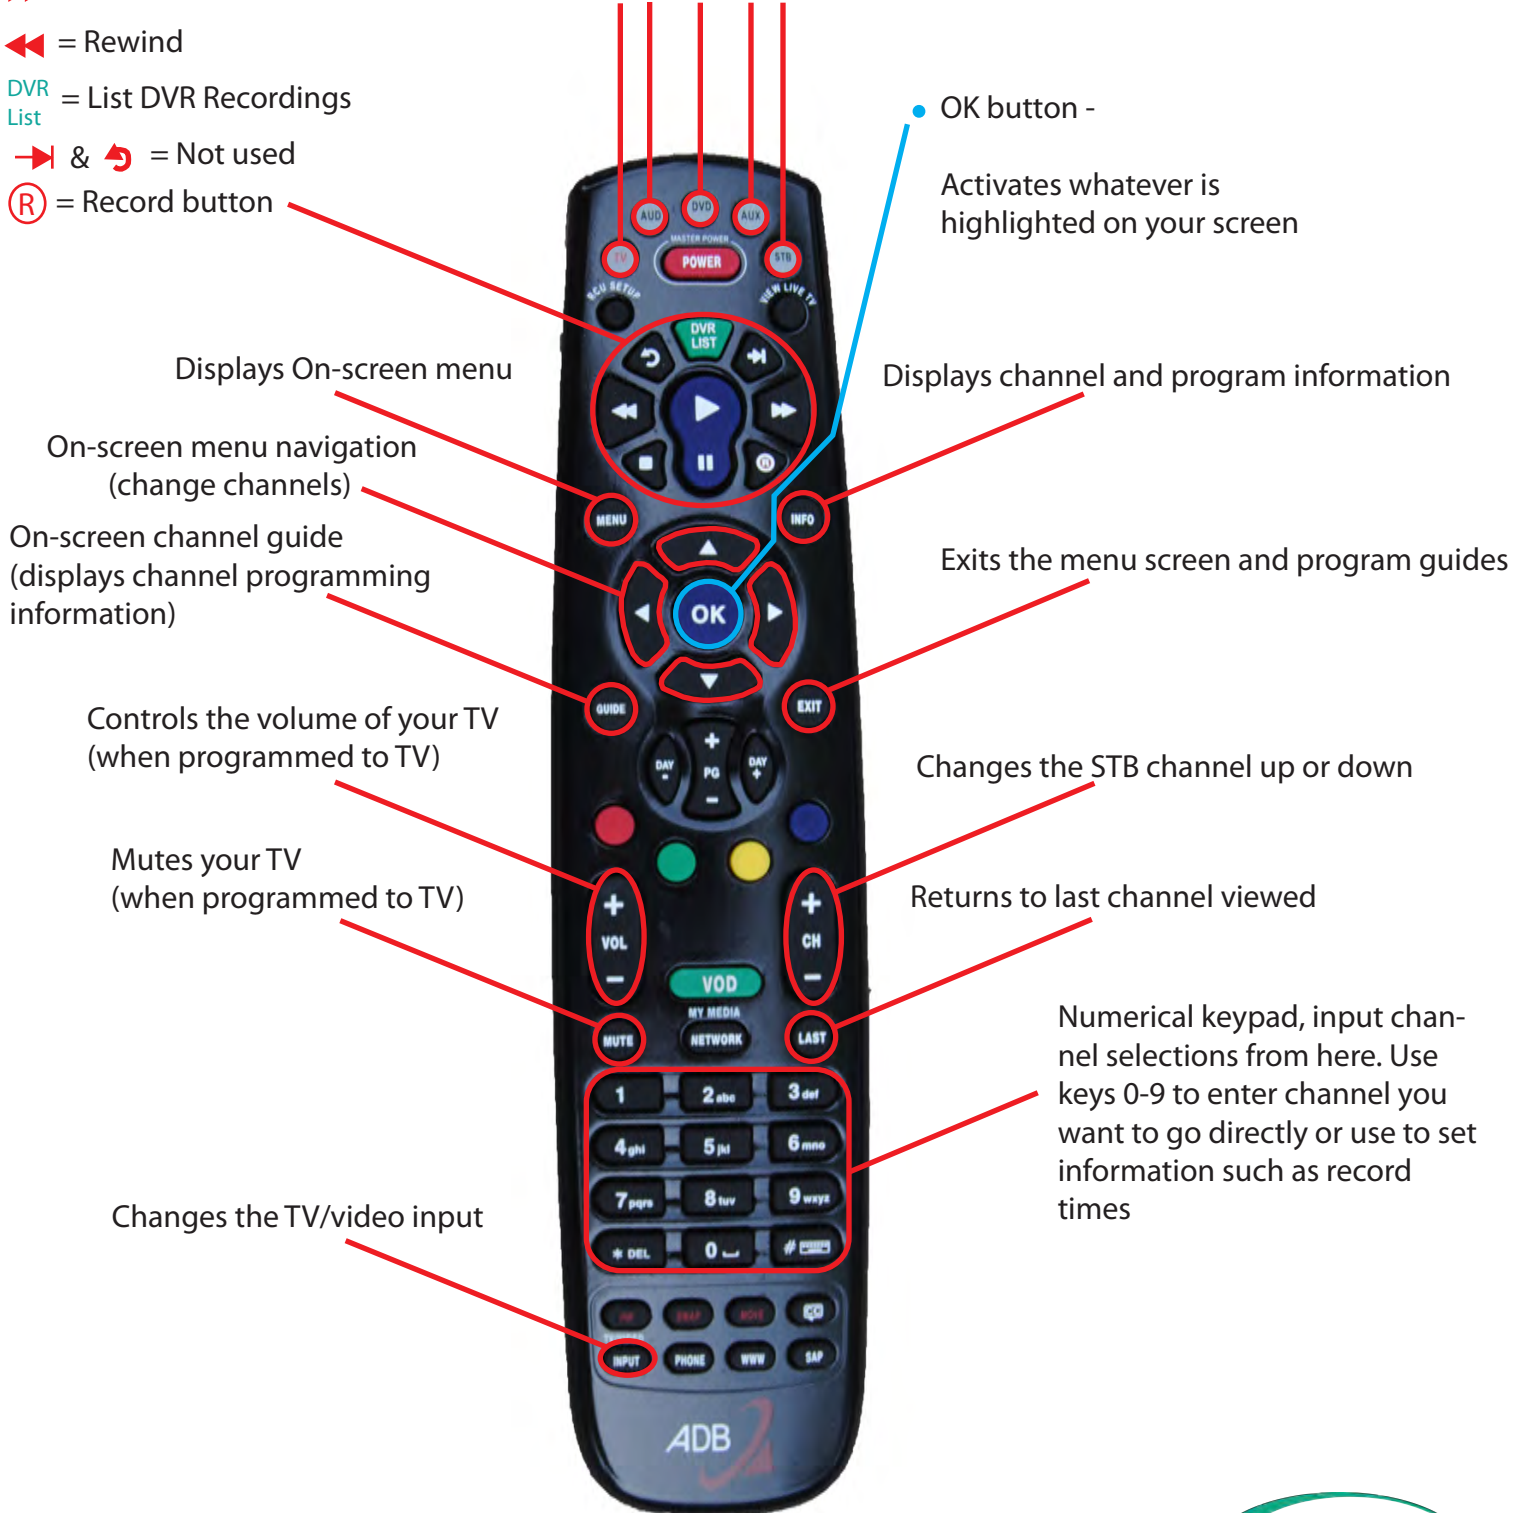

- OK button -
Activates whatever is highlighted on your screen
- Displays channel and program information
- Exits the menu screen and program guides
- Changes the STB channel up or down
- Returns to last channel viewed
- Numerical keypad, input channel selections from here. Use keys 0-9 to enter channel you want to go directly or use to set information such as record times

- Displays On-screen menu
- On-screen menu navigation (change channels)
- On-screen channel guide (displays channel programming information)
- Controls the volume of your TV (when programmed to TV)
- Mutes your TV (when programmed to TV)
- Changes the TV/video input

STB = Set Top Box
DVR = Digital Video Recorder

